

Minerva Access is the Institutional Repository of The University of Melbourne

Author/s:

Ioannidis, LJ;Mitchell, AJ;Zheng, T;Hansen, DS

Title:

CyTOF mass cytometry analysis of human memory CD4+ T cells and memory B cells

Date:

2022-06-17

Citation:

Ioannidis, L. J., Mitchell, A. J., Zheng, T. & Hansen, D. S. (2022). CyTOF mass cytometry analysis of human memory CD4+ T cells and memory B cells. STAR Protocols, 3 (2), <https://doi.org/10.1016/j.xpro.2022.101269>.

Persistent Link:


<https://hdl.handle.net/11343/307200>

License:

[CC BY-NC-ND](#)

Protocol

CyTOF mass cytometry analysis of human memory CD4⁺ T cells and memory B cells

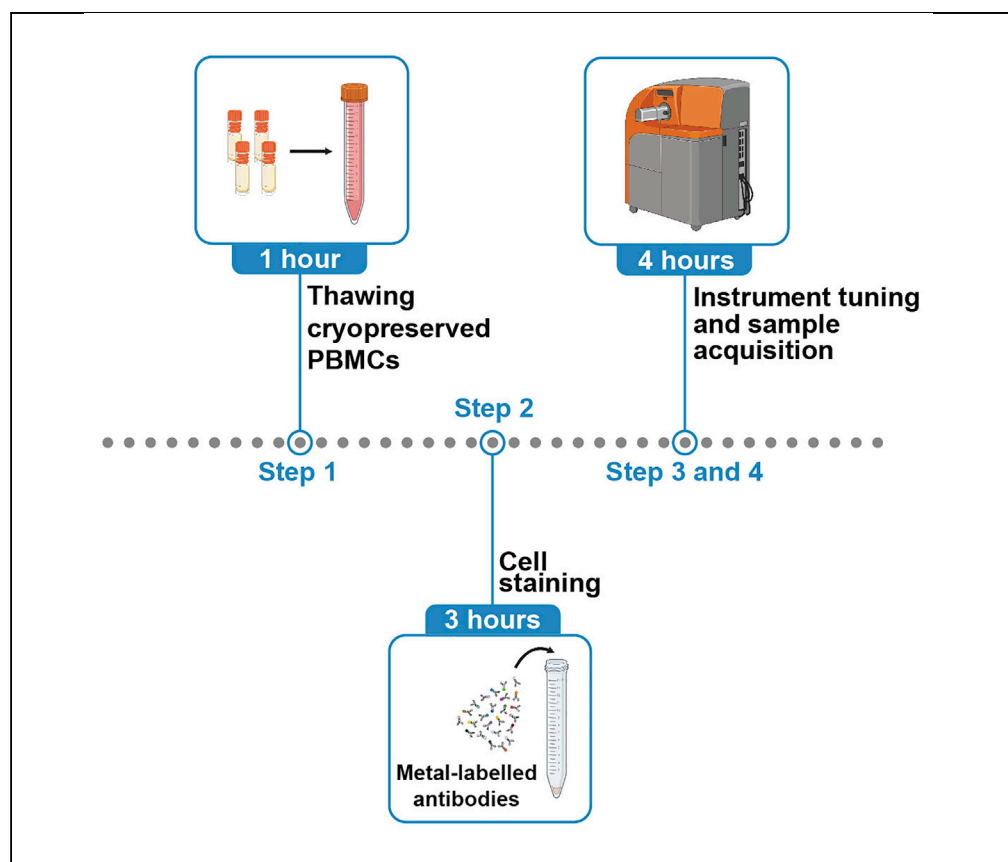

High-dimensional mass cytometry provides unparalleled insight into the cellular composition of the immune system. Here, we describe a mass-cytometry-based protocol to examine memory CD4⁺ T cell and memory B cell (MBC) responses in human peripheral blood. This approach allows for the identification of >50 distinct memory CD4⁺ T cell and MBC populations from a single clinical sample. This highly reproducible protocol has been successfully applied to multiple infectious disease settings to identify correlates of susceptibility or protection from infection.

Lisa J. Ioannidis,
Andrew J. Mitchell,
Tian Zheng, Diana S.
Hansen

ioannidis@wehi.edu.au
(L.J.I.)
hansen@wehi.edu.au
(D.S.H.)

Highlights

CyTOF mass-cytometry-based protocol to analyze human peripheral blood mononuclear cells

Optimized protocol for clinical samples

Allows in-depth analysis of human memory CD4⁺ T cell and memory B cell responses

Applicable to multiple disease settings

Ioannidis et al., STAR
Protocols 3, 101269
June 17, 2022 © 2022 The
Author(s).
<https://doi.org/10.1016/j.xpro.2022.101269>



Protocol

CyTOF mass cytometry analysis of human memory CD4⁺ T cells and memory B cellsLisa J. Ioannidis,^{1,2,4,*} Andrew J. Mitchell,³ Tian Zheng,³ and Diana S. Hansen^{1,2,5,*}¹The Walter and Eliza Hall Institute of Medical Research, Parkville, VIC 3052, Australia²The Department of Medical Biology, The University of Melbourne, Parkville, VIC 3010, Australia³The Materials Characterisation and Fabrication Platform, Department of Chemical Engineering, The University of Melbourne, Parkville, VIC 3052, Australia⁴Technical contact⁵Lead contact*Correspondence: ioannidis@wehi.edu.au (L.J.I.), hansen@wehi.edu.au (D.S.H.)
<https://doi.org/10.1016/j.xpro.2022.101269>

SUMMARY

High-dimensional mass cytometry provides unparalleled insight into the cellular composition of the immune system. Here, we describe a mass-cytometry-based protocol to examine memory CD4⁺ T cell and memory B cell (MBC) responses in human peripheral blood. This approach allows for the identification of >50 distinct memory CD4⁺ T cell and MBC populations from a single clinical sample. This highly reproducible protocol has been successfully applied to multiple infectious disease settings to identify correlates of susceptibility or protection from infection. For complete details on the use and execution of this protocol, please refer to Ioannidis et al. (2021).

BEFORE YOU BEGIN

This protocol describes a CyTOF mass cytometry-based method to characterize memory CD4⁺ T cell and MBC populations among human peripheral blood mononuclear cells (PBMCs). Here, we provide a detailed description of the basic workflow of a CyTOF experiment from sample preparation to data acquisition, as well as an overview of the different strategies that can be used to analyze CyTOF data. One of the major strengths of our protocol is that it can be used to analyze clinical samples collected from field studies where cell number in samples is a limiting factor. Although our protocol recommends staining 2×10^6 PBMCs, we have obtained robust results with as few as 5×10^5 cells.

The example provided in this study used PBMCs from healthy donors. However, we have also used this protocol to examine memory CD4⁺ T cell and MBC responses to infectious diseases including malaria, dengue fever, Chagas disease and COVID-19. This protocol could also be adapted to examine other cell populations of interest in human peripheral blood, including CD8⁺ T cells, NK cells and monocytes by adding antibodies against additional surface markers (e.g., CD8, CD14, CD16 and CD56) to our CyTOF panel.

Obtain human PBMCs

The cryopreserved PBMCs used in this study were isolated from peripheral blood collected from healthy volunteers at the Australian Red Cross Blood Service or the Walter and Eliza Hall Institute of Medical Research Volunteer Blood Donor Registry. This study was approved by the Human Research Ethics Committee of the Walter and Eliza Hall Institute of Medical Research.

Preparation of PBMC media and staining buffer

⌚ Timing: 30 min



1. Prepare PBMC media.
 - a. Add heat-inactivated (56°C, 1 h) fetal bovine serum (HI-FBS), penicillin-streptomycin and L-glutamine to RPMI-1640.
 - b. Filter sterilize and store at 4°C.
2. Prepare staining buffer.
 - a. Add bovine serum albumin (BSA) and sodium azide to Dulbecco's phosphate buffered saline (DPBS).
 - b. Incubate for 20–30 min at room temperature (20°C–25°C) to allow bovine serum albumin to completely dissolve.
 - c. Filter sterilize and store at 4°C.

△ **CRITICAL:** Many common laboratory detergents contain heavy metals such as Barium. To avoid heavy metal contamination, do not use any material (e.g., reusable glass beakers, pipettes, etc.) that has been in contact with detergent when preparing the staining buffer. We recommend running a small aliquot of staining buffer on a Helios mass cytometer before use to ensure that there is no heavy metal contamination.

KEY RESOURCES TABLE

REAGENT or RESOURCE	SOURCE	IDENTIFIER
Antibodies		
¹⁴¹ Pr-conjugated anti-human CCR6 (clone 11A9) (1:50 dilution)	Fluidigm	Cat#3141014A
¹⁴³ Nd-conjugated anti-human CD45RA (clone HI100) (1:50 dilution)	Fluidigm	Cat#3143006B
¹⁴⁶ Nd-conjugated anti-human IgD (clone IA6-2) (1:50 dilution)	Fluidigm	Cat#3146005B
¹⁴⁷ Sm-conjugated anti-human CD20 (clone 2H7) (1:50 dilution)	Fluidigm	Cat#3147001B
¹⁵¹ Eu-conjugated anti-ICOS (clone DX29) (1:50 dilution)	Fluidigm	Cat#3151020B
¹⁵² Sm-conjugated anti-human CD21 (clone BL13) (1:50 dilution)	Fluidigm	Cat#3152010B
¹⁵³ Eu-conjugated anti-human CXCR5 (clone RF8B2) (1:50 dilution)	Fluidigm	Cat#3153020B
¹⁵⁶ Gd-conjugated anti-human CXCR3 (clone G025H7) (1:50 dilution)	Fluidigm	Cat#3156004B
¹⁵⁸ Gd-conjugated anti-human CD10 (clone HI10a) (1:50 dilution)	Fluidigm	Cat#3158011B
¹⁶⁵ Ho-conjugated anti-human CD19 (clone HIB19) (1:50 dilution)	Fluidigm	Cat#3165025B
¹⁶⁷ Er-conjugated anti-human CD27 (clone L128) (1:50 dilution)	Fluidigm	Cat#3167006B
¹⁷⁰ Er-conjugated anti-human CD3 (clone UCHT1) (1:50 dilution)	Fluidigm	Cat#3170001B
¹⁷² Yb-conjugated anti-human IgM (clone MHM-88) (1:50 dilution)	Fluidigm	Cat#3172004B
¹⁷⁴ Yb-conjugated anti-human CD4 (clone SK3) (1:50 dilution)	Fluidigm	Cat#3174004B
¹⁷⁵ Lu-conjugated anti-human PD-1 (clone EH12.2H7) (1:50 dilution)	Fluidigm	Cat#3175008B
¹⁷⁶ Yb-conjugated anti-human CD127 (clone A019D5) (1:50 dilution)	Fluidigm	Cat#3176004B
¹⁶¹ Dy-conjugated anti-T-bet (clone 4B10) (1:50 dilution)	Fluidigm	Cat#3161014B
Human TruStain FcX (1:10 dilution)	BioLegend	Cat#422302

(Continued on next page)

Continued		
REAGENT or RESOURCE	SOURCE	IDENTIFIER
Biological samples		
Human PBMCs from healthy male and female donors, 25–59 years of age.	The Australian Red Cross Blood Service or The Walter and Eliza Hall Institute of Medical Research Volunteer Blood Donor Registry	N/A
Chemicals, peptides, and recombinant proteins		
RPMI-1640	Life Technologies	Cat#11875101
200 mM L-glutamine	Gibco	Cat#25030081; CAS: 56-85-9
Penicillin-streptomycin	Gibco	Cat#15140122
Fetal bovine serum	Sigma-Aldrich	Cat#12007C; CAS: 1943609-65-1
Dulbecco's phosphate buffered saline (DPBS)	Gibco	Cat#14190144
Bovine serum albumin	Sigma-Aldrich	Cat#A7906-100G; CAS: 9048-46-8
Sodium azide	Sigma-Aldrich	Cat#S8032-25G; CAS: 26628-22-8
Trypan blue	Sigma-Aldrich	Cat#T8154-100ML; CAS: 72-57-1
Cell-ID Cisplatin - 5 mM	Fluidigm	Cat#201064
Cell-ID Intercalator Ir - 125 μ M	Fluidigm	Cat#201192A
Critical commercial assays		
Maxpar nuclear antigen staining buffer set	Fluidigm	Cat#201063
Maxpar fix and perm buffer	Fluidigm	Cat#201067
Software and algorithms		
CytoF software V 7.0.8493	Fluidigm	N/A
Premessa normalizer	Parker Institute for Cancer Immunotherapy	https://github.com/ParkerICI/premessa/
tSNE algorithm	Cytobank	(Kotecha et al., 2010)
FlowSOM algorithm	Cytobank	(Kotecha et al., 2010)
FlowJo version 10	BD	N/A
Other		
10 mL polypropylene tubes	Sarstedt	Cat#62.9924.284
Cell strainers	Falcon	Cat#352340
Hemocytometer	Merck	Cat#Z359629-1EA
96-well u-bottom plates	Falcon	Cat#353077
1.7 mL microcentrifuge tubes	Axygen	Cat#72.690.001
500 mL 0.2 μ m filter units	Nalgene	Cat#566-0020
CytoF wash solution	Fluidigm	Cat#201070
CytoF tuning solution	Fluidigm	Cat#201072
Four element EQ beads	Fluidigm	Cat#201078
Cell strainer tubes, 5 mL, 12 $\times$ 75 mm, 35 μ m mesh size	Falcon	Cat#352235
Round-Bottom Polystyrene tubes, 5 mL, 12 $\times$ 75 mm	Falcon	Cat#352058
Helios Mass cytometer	Fluidigm	N/A

MATERIALS AND EQUIPMENT

PBMC media		
Reagent	Final concentration	Amount
RPMI-1640	N/A	440 mL
HI-FBS	10% (v/v)	50 mL
Penicillin-streptomycin	100 U/mL penicillin and 100 μ g/mL streptomycin	5 mL
200 mM L-glutamine	2 mM	5 mL
Total	N/A	500 mL

Store at 4°C for up to one month.

Cell staining buffer		
Reagent	Final concentration	Amount
DPBS	N/A	500 mL
BSA	0.5% (w/v)	2.5 g
Sodium azide	0.02% (w/v)	100 mg
Total	N/A	500 mL

Store at 4°C for up to two months.

⚠ **CRITICAL:** Sodium azide is a hazardous substance. Avoid contact with skin, inhalation and ingestion. Weigh sodium azide powder in a certified chemical fume hood and use appropriate PPE.

Alternatives: Cell staining buffer can be purchased from Fluidigm (Cat#201068).

STEP-BY-STEP METHOD DETAILS

Thawing cryopreserved PBMCs

⌚ **Timing:** 60 min

This section describes the procedure for thawing cryopreserved PBMCs to use for cell staining.

1. Collect vials of PBMCs from liquid nitrogen and place on dry ice.
2. Thaw cells.
 - a. Working with two vials of PBMCs at a time, rapidly thaw the cells by placing the vials in a 37°C water bath.
 - b. Allow cells to thaw in the water bath until only a pea sized piece of ice remains (1–2 min).
 - c. Transfer the contents of each vial to a pre-labeled 10 mL tube on ice.
 - d. Add 10 drops of cold PBMC media to each tube using a transfer pipette and then gently flick each tube to mix.
 - e. Repeat step 2d until the tube has been filled to 5 mL.
 - f. Use 1 mL of media from the 10 mL tube to rinse the cryovial and collect any remaining cells.
 - g. Place the cap on each tube and gently invert to mix.
 - h. Add 20 drops of cold PBMC media to each tube and then gently flick each tube to mix.
 - i. Repeat step 2h until the tubes have been filled to 10 mL.
 - j. Centrifuge the cells at 350 g for 5 min.
 - k. Aspirate the supernatant.
 - l. Flick the tubes to disrupt the cell pellets.
 - m. Thoroughly resuspend cells in 10 mL of cold PBMC media.
 - n. Place tubes on ice until the remaining vials of PBMCs have been thawed.
 - o. Repeat steps 2a–2n to thaw the remaining vials.

Note: If cell clumps are observed, pass cell suspension through a 40 µm cell strainer to remove clumps before counting.

3. Count cells using a hemocytometer.
 - a. Add 10 µL of trypan blue to the wells of a u-bottom 96-well plate (prepare one well for each sample to be counted).
 - b. Add 10 µL of cells to each well and pipette to mix.
 - c. Load 10 µL of this mixture into a hemacytometer.
 - d. Count cells.
 - e. Calculate number of cells per sample.

4. Centrifuge the cells at 350 g for 5 min.
5. Aspirate the supernatant.
6. Flick the tubes to disrupt the cell pellets.
7. Resuspend cells to 2×10^6 cells/mL with PBMC media.
8. Transfer 1 mL (2×10^6 cells) of cells to a fresh 10 mL tube and place on ice until you are ready to start the staining protocol.

Note: The timing for this step is based on thawing four vials of PBMCs.

We routinely freeze aliquots of 10^7 PBMCs. The cells from each vial of 10^7 PBMCs was resuspended in 10 mL of PBMC media prior to counting. This may need to be adjusted to obtain an accurate cell count depending on the number of PBMCs you have per vial. If cells are resuspended in a smaller volume for counting, top the tube up to 10 mL with PBMC media after the cell count has been performed (step 3).

Alternatives: An automated cell counter can be used instead of a hemocytometer. This may reduce the amount of time required for this step.

Cell staining

⌚ Timing: 3 h

This section describes the procedure for staining PBMCs with metal-labeled antibodies. Cells are first stained with cisplatin, which is a viability stain used for dead cell discrimination, followed by a cocktail of metal-labeled antibodies against surface makers of interest. After surface staining, cells are fixed and permeabilized and then stained with metal-labeled antibodies against intracellular antigens. The cells are then fixed in the presence of an iridium-labeled DNA intercalator, which allows for the discrimination of nucleated cells from cellular debris. This protocol has been adapted from the Fluidigm MaxPar Nuclear Antigen Staining Protocol with Fresh Fix (<https://fluidigm.my.salesforce.com/sfc/p/#700000009Daw/a/4u0000019gvy/k1.CbKFY8JN7swG2ZVHybPpEZldzMpDAZnJYQvxyrrc>).

9. Prepare Cell-ID Cisplatin, Fc receptor block and surface marker antibody cocktail.
 - a. Cell-ID Cisplatin: Dilute 5 mM Cell-ID Cisplatin 1:1,000 in DPBS to make a 5 μ M working stock (prepare 200 μ L/sample).
 - b. Fc receptor block: Dilute Human TruStain FcX 1:10 in cell staining buffer (prepare 50 μ L/sample).
 - c. Surface marker antibody cocktail: Dilute each surface marker antibody in cell staining buffer as indicated in Table 1 (prepare 50 μ L/sample).
 - d. Place on ice until needed.
10. Cisplatin staining.
 - a. Add 2 mL of DPBS to each tube of cells containing 1 mL (2×10^6) of cells from step 8.
 - b. Centrifuge the cells at 350 g for 5 min.
 - c. Aspirate the supernatant.
 - d. Flick the tubes to disrupt the cell pellets.
 - e. Add 200 μ L of the Cell-ID cisplatin prepared in step 9a to each tube.
 - f. Pipette to mix and incubate for 5 min at room temperature (20°C–25°C).

Note: Cell-ID cisplatin staining must be performed in serum-free medium.

⚠ CRITICAL: Cells should be stained with Cell-ID cisplatin for a maximum of 5 min. Staining for longer than 5 min can result in significant cell death.

Table 1. Surface marker antibody cocktail

Antibody	Dilution factor	Volume per test
¹⁴¹ Pr-conjugated anti-human CCR6 (clone 11A9)	50	1 μ L
¹⁴³ Nd-conjugated anti-human CD45RA (clone HI100)	50	1 μ L
¹⁴⁶ Nd-conjugated anti-human IgD (clone IA6-2)	50	1 μ L
¹⁴⁷ Sm-conjugated anti-human CD20 (clone 2H7)	50	1 μ L
¹⁵¹ Eu-conjugated anti-ICOS (clone DX29)	50	1 μ L
¹⁵² Sm-conjugated anti-human CD21 (clone BL13)	50	1 μ L
¹⁵³ Eu-conjugated anti-human CXCR5 (clone RF8B2)	50	1 μ L
¹⁵⁶ Gd-conjugated anti-human CXCR3 (clone G025H7)	50	1 μ L
¹⁵⁸ Gd-conjugated anti-human CD10 (clone HI10a)	50	1 μ L
¹⁶⁵ Ho-conjugated anti-human CD19 (clone HIB19)	50	1 μ L
¹⁶⁷ Er-conjugated anti-human CD27 (clone L128)	50	1 μ L
¹⁷⁰ Er-conjugated anti-human CD3 (clone UCHT1)	50	1 μ L
¹⁷² Yb-conjugated anti-human IgM (clone MHM-88)	50	1 μ L
¹⁷⁴ Yb-conjugated anti-human CD4 (clone SK3)	50	1 μ L
¹⁷⁵ Lu-conjugated anti-human PD-1 (clone EH12.2H7)	50	1 μ L
¹⁷⁶ Yb-conjugated anti-human CD127 (clone A019D5)	50	1 μ L

- g. Add 2 mL of cell staining buffer to each tube.
- h. Centrifuge the cells at 350 g for 5 min.
- i. Aspirate the supernatant.
- j. Flick the tubes to disrupt the cell pellets.
11. Surface marker staining.
 - a. Add 50 μ L of Fc receptor block prepared in step 9b to each tube.
 - b. Pipette to mix and incubate for 10 min at room temperature (20°C–25°C) on an orbital mixer at 100 rpm.
 - c. Add 50 μ L of antibody cocktail prepared in step 9c to each tube.
 - d. Pipette to mix and incubate for 30 min at room temperature (20°C–25°C) on an orbital mixer at 100 rpm.
 - e. Add 2 mL of cell staining buffer to each tube.
 - f. Centrifuge the cells at 350 g for 5 min.
 - g. Aspirate the supernatant.
 - h. Flick the tubes to disrupt the cell pellets.
 - i. Repeat steps 11e–11h.
12. Intracellular staining.
 - a. Vortex samples to thoroughly disrupt the cell pellets.
 - b. Add 1 mL of nuclear antigen staining buffer to each tube.
 - c. Vortex to mix and incubate for 30 min at room temperature (20°C–25°C).
 - d. Add 2 mL of nuclear antigen staining perm to each tube.
 - e. Centrifuge the cells at 800 g for 5 min.

Note: Cells are centrifuged at a higher speed after fixation to reduce cell loss.

- f. Aspirate the supernatant.
- g. Flick the tubes to disrupt the cell pellets.
- h. Repeat steps 12d–12g.
- i. Vortex samples to thoroughly disrupt the cell pellets.
- j. Add 50 μ L of a 1:50 dilution ¹⁶¹Dy-conjugated anti-T-bet (clone 4B10) antibody to each tube.
- k. Pipette to mix and incubate for 30 min at room temperature (20°C–25°C).
- l. Add 2 mL of nuclear antigen staining perm to each tube.
- m. Centrifuge the cells at 800 g for 5 min.
- n. Aspirate the supernatant.

- o. Flick the tubes to disrupt the cell pellets.
- p. Repeat steps 12l–12o.
- q. Vortex samples to thoroughly disrupt the cell pellets.
- r. Place cells on ice for 10 min.
13. Iridium intercalator staining.
 - a. While cells are incubating on ice, prepare the DNA intercalator.
 - i. Dilute 125 μ M Cell-ID Intercalator-Ir 1:1,000 in Maxpar Fix and Perm Buffer to make a 125 nM working stock (prepare 1 mL/sample).
 - b. Add 1 mL of intercalator to each tube.
 - c. Vortex to mix and incubate at 4°C overnight (16–20 h).

Note: Adequate fixation of cell suspensions is critical for maintaining cellular integrity during subsequent washes in ultra-pure water prior to acquisition. Failure to appropriately fix cell suspensions leads to loss of cells and clogging of the sample introduction system with debris during sample acquisition.

Alternatives: Cell suspensions can also be fixed in a minimum of 4% fresh formaldehyde with iridium intercalator for at least 4 h, however overnight (16–20 h) fixation at 4°C is recommended.

Pause point: We usually run the samples on a Helios mass cytometer the next day, however samples may be stored for 2–4 days at 4°C without apparent detrimental effects.

Instrument tuning

⌚ **Timing:** 1 h

This step involves setting up the mass cytometer, followed by bead quality control (QC). Final sample preparation steps can be performed during instrument setup so that these can be acquired immediately on completing.

14. Tuning and QC is performed based on the standard Helios™ setup procedure as described in detail in the Helios User Guide. Note that other CyTOF™ systems such as the CyTOF2™ and CyTOF XT™ can also be used after following their specific setup procedures. Full tuning is recommended at the beginning of each day (described here), and with a full day analysis an additional quick tuning protocol is recommended to be run mid-way to ensure system responsiveness.
 - a. Connect the nebulizer, and in the CyTOF software switch on the heater, nebulizer gas and sample flow running ultra-pure water. Droplet formation is monitored by spraying onto the underside of a cell culture dish lid.
 - b. Stop the sample instruction before mounting the nebulizer and when the heater temperature is >195°C, ignite the plasma. Leave instrument to thermally stabilize for a minimum of 20 min. A tube of tuning solution is introduced using the sample loader and the ¹⁵⁹Tb dual count signal monitored in masses per reading mode until it has stabilized.
 - c. In tuning manager, launch the full automated tuning protocol. Signal from ¹⁵⁹Tb should be >6 × 10⁵ counts per pg.
 - d. Remove tuning solution and wash for 3–5 min with wash solution, followed by 3–5 min with ultra-pure water.
 - e. Vigorously shake four element EQ bead bottle for 30 s and load a tube with 0.5 mL of beads into sample loader. Monitor bead rate using a rain plot with a protocol with bead channels open until event rate has stabilized. Collect 120 s of data.
 - f. After EQ bead sample has finished acquisition, in the Process mode run clustering on the resulting EQ file to identify the main bead populations: ¹⁵¹Eu, ¹⁵³Eu median signals should be >1,000 counts, and total bead numbers should be >6000.

- g. Load a tube of ultra-pure water into the sample loader and run until samples are ready for acquisition.
- h. At the end of the day, following sample acquisition (described below), run wash solution for 5 min and ultra-pure water for a further 5 min prior to shutting the system down, and removing the nebulizer. Refill the nebulizer with ultra-pure water to avoid clogging in dry state.

Sample acquisition

⌚ Timing: 3 h

This section outlines the final sample preparation steps as well as acquisition of data from samples. Cell suspensions have previously been fixed and stained in a solution with iridium intercalator and have been stored at 4°C. They are retrieved and washed in batches throughout the course of the sample procedure to minimize degradation effects due to being resuspended in ultra-pure water.

The timing for this step is based on acquiring four samples, with approximately 400,000 events acquired per sample. However, the time needed for acquisition of each sample depends on the cells available and the number of processed events needed for downstream analysis. A rule of thumb calculation is that approximately $0.75\text{--}1 \times 10^6$ cells can be introduced into the system per hour of instrument run time, and with a typical transport efficiency of approximately 55%–60%, this equates to around $0.4\text{--}0.6 \times 10^6$ events collected per hour. The number of “useable” events for downstream analysis then depends on any loss during pre-processing steps such as doublet discrimination and viability gating – see [expected outcomes](#). Ultimately there is no hard and fast rule to the number of events to acquire per sample, and this should be informed by experimental design and analysis strategies ([Marsh-Wakefield et al., 2021](#)).

15. Wash cell suspensions.

- a. An EQ bead suspension is made fresh daily by vigorously shaking the storage bottle for 30 s prior to aliquoting of 1 mL beads to 9 mL water. This step can be performed during the subsequent centrifugation steps.
- b. Samples that have been stained are retrieved from storage at 4°C. Each sample is in fixative and iridium intercalator in a volume of 1.0 mL.
- c. Transfer suspension to a round-bottomed 5 mL snap-cap centrifuge tube, add 4 mL ultra-pure water, replace tube cap and invert to mix.
- d. Centrifuge at 1,000 g for 8 min at ambient temperature in swinging bucket centrifuge, then decant supernatant.

Note: The supernatant must be treated as toxic waste as it contains formaldehyde. Use appropriate PPE and follow institutional guidelines for waste disposal.

- e. Gently flick cell pellet to resuspend, then add 4 mL of ultra-pure water, replace tube cap and invert to mix.
- f. Centrifuge at 1,000 g for 8 min at ambient temperature (20°C–25°C) in swinging bucket centrifuge, then decant supernatant, leaving cell in pellet form and stored on ice or at 4°C until acquisition.
- g. Resuspend cells at approximately $0.75\text{--}1 \times 10^6$ cells per mL in a 1 in 10 dilution of EQ beads in ultra-pure water by pipetting, and filter through the mesh of a cell strainer tube.

Note: Cell suspensions must be filtered immediately prior to acquisition to avoid clogging.

16. Acquire sample on Helios.

- a. Set up a template that includes, at a minimum, all required parameters for the experiment. A full mass range template is recommended to monitor for unexpected metal contamination

that could degrade instrument performance. The template can be set up during sample washing to save time.

- b. Load sample and acquire in CyTOF software. Default sample collection settings are generally appropriate. Collection of .imd format files in addition to .fcs files is recommended as, in the unlikely event of poor event detection, data can be reprocessed to .fcs files.
- c. Monitor the run using a rain plot to ensure stable sample delivery, absence of clogging, and absence of metal contamination. With the High Throughput (HT) injector, an appropriate event rate is approximately 300–400 events per second, though lower event rates will reduce co-incidences and decrease eventual doublet events. If the event rate is higher than recommended, sample acquisition can be paused, and additional water/EQ mix can be added to adjust event rate.
- d. Following collection of data from each sample, load a tube of ultra-pure water on the sample introduction system and monitor the event rate in Preview mode until the event rate is < 1 per second. Note that processing of data into .fcs format may continue for some minutes after stopping data acquisition, and a tube of water can be run during this period to shorten washing time.
- e. Between every 3–4 samples run wash solution for 3 min and then ultra-pure water for 3–5 min to remove lanthanides adhering to the sample tubing. Monitor the event rate in Preview mode until the event rate is < 1 per second.

Note: In this example, a HT injector was used with cells suspended in a suspension of EQ beads in ultra-pure water. Use of a Wide Bore (WB) injector with cells resuspended in cell acquisition solution (not described here) is an alternative. Considerations for choice between use HT and WB injectors are instrument and sample dependent (Lee et al., 2019; Thrash et al., 2020).

EQ beads are included to normalize any signal drift during the run and is done post acquisition – see [expected outcomes](#). Cell suspension samples are prepared throughout the day to avoid storage in pellet form for longer than necessary. A typical approach is to prepare two samples of approximately 10^6 cells per sample at one time, overlapping preparation times so that when one set is finished running, the first sample of the next set is ready to acquire.

EXPECTED OUTCOMES

The .fcs data files produced at the end of this procedure can be analyzed using standard single-cell cytometry packages such as FlowJo and FCS express, as well as high-dimensional data analysis algorithms. Before performing exploratory analysis, data normalization must be performed to correct for intra- and inter-sample signal drift (Finck et al., 2013). This step can be performed in CyTOF software or using R packages such as Premessa (<https://github.com/ParkerICI/premessa/>). Manual gating is then performed to exclude EQ beads and identify viable single cells (Figure 1). After these pre-processing steps have been completed, exploratory analysis can be performed using traditional biaxial manual gating.

An example of a manual gating strategy to identify MBC subsets is shown in Figure 2A. This gating strategy allows for the identification of CD21⁺CD27[−] atypical MBCs, CD21⁺CD27⁺ activated MBCs and CD21⁺CD27⁺ classical MBCs. These subsets can be further divided into un-switched (IgM⁺IgD[−] and IgM⁺IgD⁺) and class-switched (IgM[−]IgD[−]) cells based on their surface expression of IgM and IgD. Although manual gating can be useful, it can be labor-intensive, relies on prior knowledge of the cell population of interest and may ignore novel and unexpected cell populations. To overcome these limitations, mass cytometry data can also be analyzed using unbiased high-dimensional data analysis algorithms such as tSNE and FlowSOM. This approach may reveal previously unappreciated heterogeneity within defined cell populations and uncover novel cell populations. Using this approach, we were able to identify 5 distinct MBC sub-populations, including un-switched and switched cells expressing variable levels of the chemokine receptors CXCR3, CXCR5 and CCR6 within the classical,

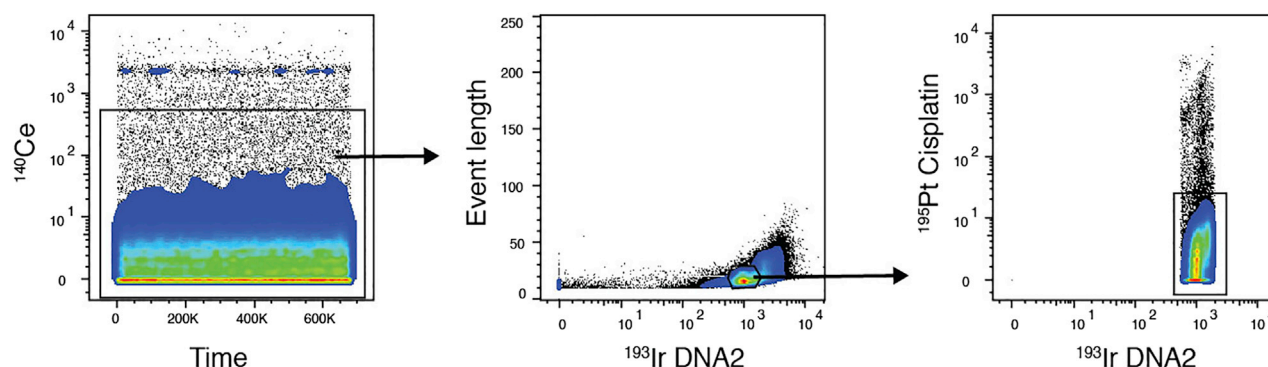


Figure 1. Pre-processing of CyTOF data

PBMCs from four healthy donors were stained with a panel of metal-labeled antibodies and analyzed by CyTOF. The resulting data was then normalized using Premessa. Manual gating was then used to remove EQ beads (^{140}Ce high events) and exclude cell debris (^{193}Ir -DNA2⁻ cells) and dead cells (^{195}Pt Cisplatin high cells) before exploratory data analysis was performed.

atypical and activated MBCs subsets (Figures 2B–2D). The parameters and settings used for the tSNE analysis shown in Figure 2 are listed in Table 2. A similar strategy can also be used to examine the composition of the memory CD4⁺ T cell pool. Within the memory CD4⁺ T cell pool, expression of the chemokine receptors CCR6 and CXCR3 can be used to distinguish T_{H1} CD4⁺ T cells (CXCR3⁺CCR6⁻), T_{H2} CD4⁺ T cells (CXCR3⁻CCR6⁻) and T_{H17} CD4⁺ T cells (CXCR3⁻CCR6⁺), while CXCR5 can be used to identify circulating memory T follicular helper (T_{FH}) cells (Figure 2E). Further analysis of these subsets using tSNE analysis and FlowSOM clustering, revealed a high degree of heterogeneity within these subsets and allowed for the identification of > 20 distinct memory CD4⁺ T cell sub-populations (Figures 2F–2I).

QUANTIFICATION AND STATISTICAL ANALYSIS

Manual gating or clustering algorithms such as FlowSOM can be used to determine the frequency of individual cell populations. Differentially abundant cell populations can then be identified using univariate tests (e.g., t-test, Mann-Whitney test, one-way ANOVA), while the association between cell frequencies and different outcomes can be explored using linear or logistic regression.

LIMITATIONS

This protocol uses commercially available metal-labeled antibodies purchased from Fluidigm. Although Fluidigm has more than 800 metal-labeled antibodies against at least 400 human antigens, specific clones or antibodies against less common antigens may not be available. If a pre-conjugated antibody is not available, custom conjugations can be performed. A detailed protocol for custom conjugations is described elsewhere (Thrash et al., 2020).

The protocol here describes the acquisition of non-barcoded samples – however, sample barcoding is generally recommended as it has many advantages, including higher throughput (due to decreased between-sample washing), improved doublet discrimination during post-acquisition debarcoding, and decreased between-sample signal variation due to control of instrument signal drift. Barcoding approaches have been outlined elsewhere (Marsh-Wakefield et al., 2021; Rybakowska et al., 2020).

TROUBLESHOOTING

Problem 1

This protocol requires 2×10^6 PBMCs for each stain. However, this may not be possible when working with clinical samples (step 3).

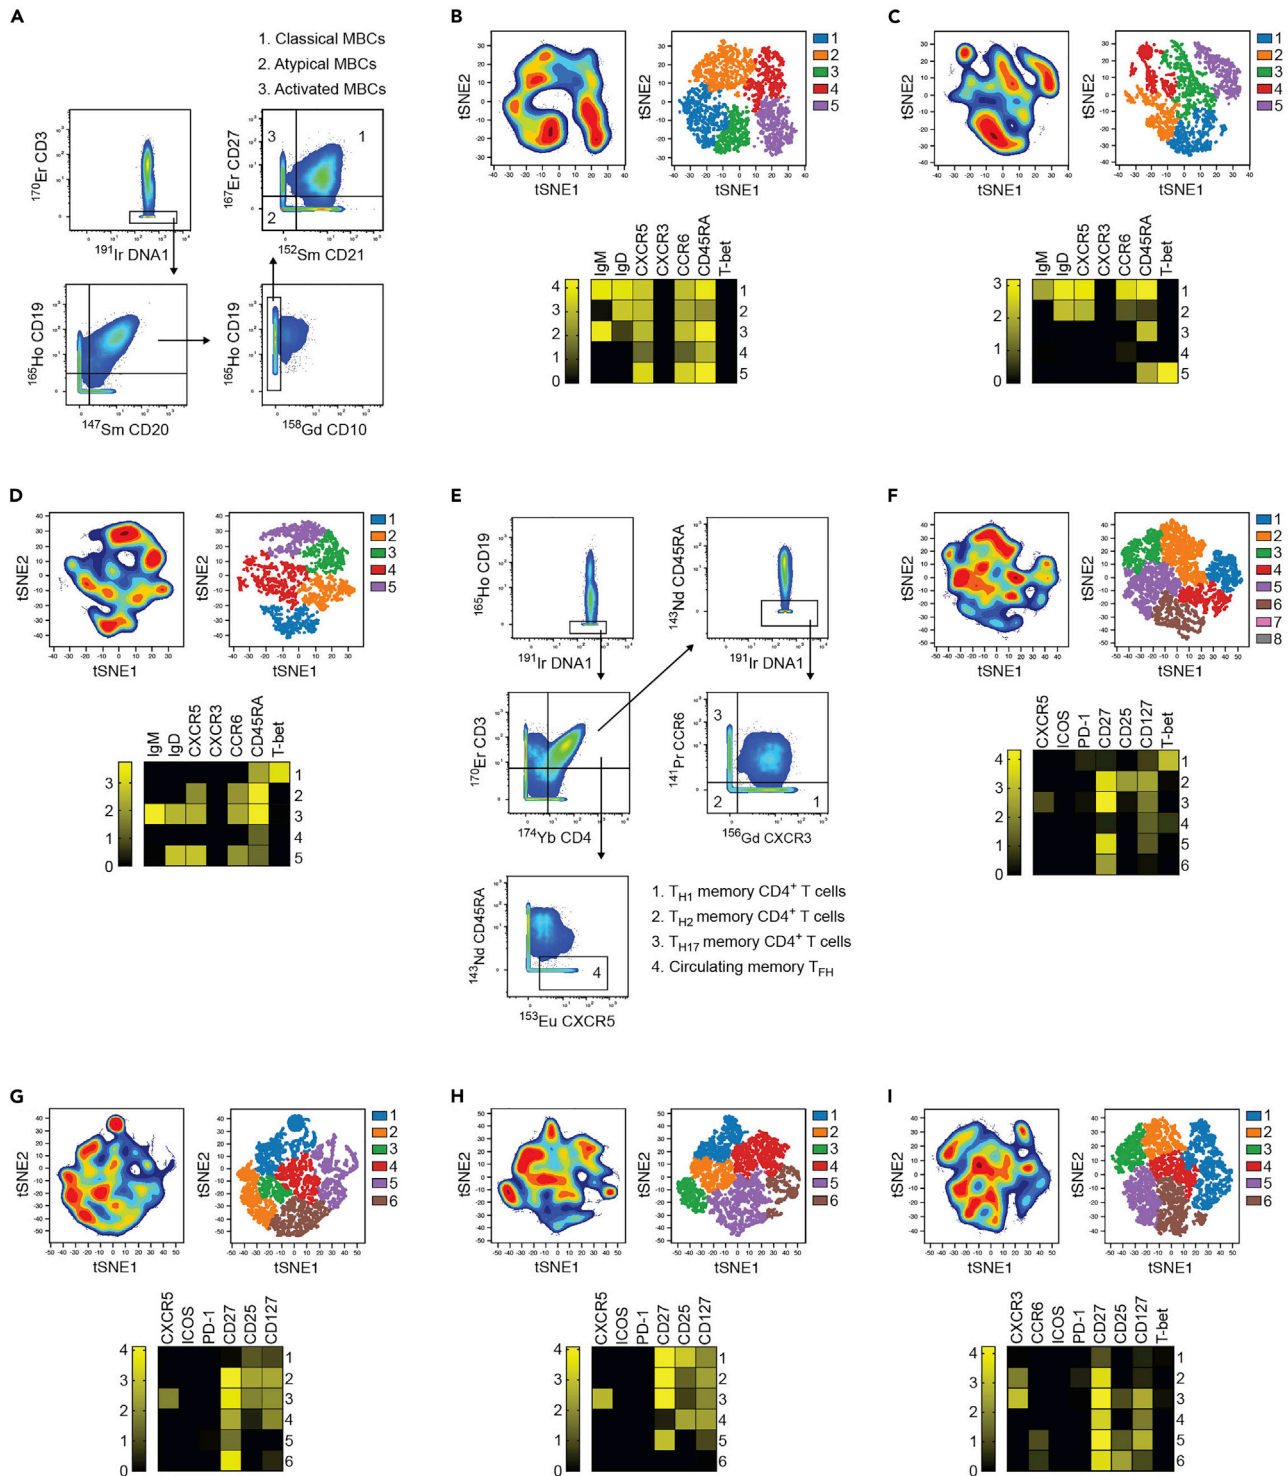


Figure 2. CyTOF data analysis

(A) PBMCs from four healthy donors were stained with a panel of metal-labeled antibodies and analyzed by CyTOF. After data pre-processing, manual gating was used to identify classical MBCs ($CD3^+CD19^+CD20^+CD10^+CD27^+CD21^+$), atypical MBCs ($CD3^+CD19^+CD20^+CD10^+CD27^+CD21^-$) and activated MBCs ($CD3^+CD19^+CD20^+CD10^+CD27^+CD21^+$). tSNE analysis was then performed in Cytobank ([Kotecha et al., 2010](#)) before self-organizing maps (SOMs) were generated using hierarchical consensus clustering on the tSNE axes.

(B) tSNE and FlowSOM analysis of classical MBCs.

Figure 2. Continued

(C) tSNE and FlowSOM analysis of atypical MBCs.

(D) tSNE and FlowSOM analysis of activated MBCs.

(E) A similar approach was used to analyze the memory CD4⁺ T cell compartment. Manual gating was used to identify T_{H1} memory CD4⁺ T cells (CD19⁻CD3⁺CD4⁺CD45RA⁻CCR6⁺CXCR3⁺), T_{H2} memory CD4⁺ T cells (CD19⁻CD3⁺CD4⁺CD45RA⁻CCR6⁺CXCR3⁺), T_{H17} memory CD4⁺ T cells (CD19⁻CD3⁺CD4⁺CD45RA⁻CCR6⁺CXCR3⁺) and circulating memory T_{FH} cells (CD19⁻CD3⁺CD4⁺CD45RA⁻CXCR5⁺) before tSNE analysis and FlowSOM clustering was performed for each memory CD4⁺ T cell sub-set.

(F) tSNE and FlowSOM analysis of T_{H1} memory CD4⁺ T cells.

(G) tSNE and FlowSOM analysis of T_{H2} memory CD4⁺ T cells.

(H) tSNE and FlowSOM analysis of T_{H17} memory CD4⁺ T cells.

(I) tSNE and FlowSOM analysis of circulating memory T_{FH} cells. The tSNE plots in the upper left panel display cell density and represent the pooled data from four healthy donors, while the upper right panel shows a projection of the FlowSOM clusters on the tSNE plot. Heatmaps shows the mean marker expression for each FlowSOM cluster.

Potential solution

We have found that approximately 70% of cells are lost during this staining protocol (Figure 3). Most of this cell loss occurs during the intranuclear staining step. If fewer cells are available, we recommend performing only surface staining to ensure that enough cells can be acquired for downstream analysis. Alternatively, other approaches may reduce cell loss during the staining procedure including, barcoding and pooling cells for staining, increasing the centrifugation time to 8 min, and optimizing the fixation and permeabilization conditions (e.g., trying different fixation and permeabilization kits, testing different concentrations of PFA and saponin, increasing the length of incubations).

Problem 2

Low antibody signal intensity cell (steps 11 and 12).

Potential solution

We typically use pre-labeled commercial antibodies at a 1:50 dilution (1 μ L per test). However, if low signal intensity is observed, antibody titrations should be performed to determine the optimal dilution factor for each antibody.

Problem 3

Significant cell loss and clogging of the sample introduction system during acquisition (step 16).

Potential solution

We have found that inadequate fixation is one of the most common causes of significant cell loss and clogging of the sample introduction system during acquisition. A Helios mass cytometer has a transmission efficiency of approximately 55%–60%. If >50% cell loss observed or repeated clogging of the sample introduction system is experienced, prepare fresh fixative and ensure that samples are fixed for at least 4 h before acquisition.

Problem 4

Cisplatin staining reveals higher or lower than expected cell viability (step 10).

Table 2. Parameters and setting used for tSNE analysis

Cell population	Events per sample	Parameters	Settings
Classical, atypical and activated MBCs	750	IgM, IgD, CXCR5, CCR6, CXCR3, CD45RA and T-bet	iterations=1000, perplexity=30, theta= 0.5
T _{H1} memory CD4 ⁺ T cells	2,000	CXCR5, ICOS, PD-1, CD27, CD25, CD127 and T-bet	iterations=1000, perplexity=30, theta= 0.5
T _{H2} , and T _{H17} memory CD4 ⁺ T cells	2,000	CXCR5, ICOS, PD-1, CD27, CD25 and CD127	iterations=1000, perplexity=30, theta= 0.5
Circulating memory T _{FH} cells	1,800	CXCR3, CCR6, ICOS, PD-1, CD27, CD25, CD127 and T-bet	iterations=1000, perplexity=30, theta= 0.5

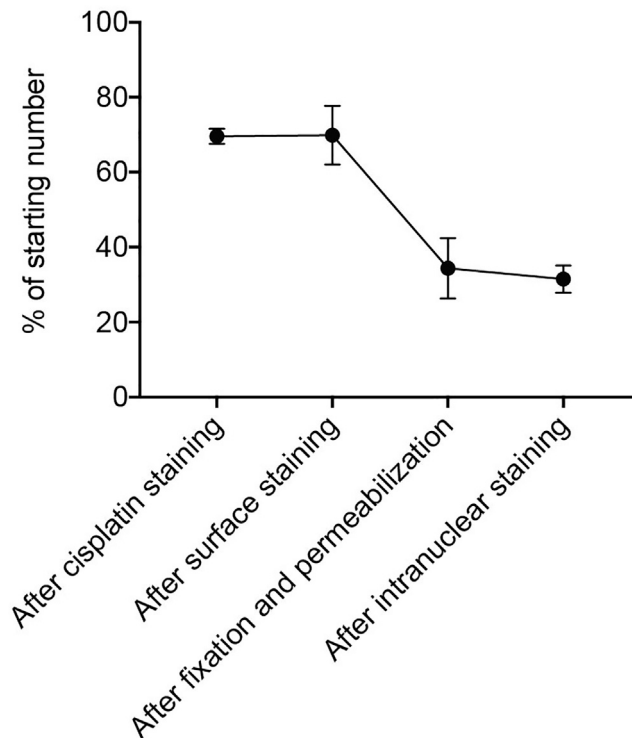


Figure 3. Cell loss during cell staining

PBMCs from four healthy donors were stained with a panel of metal-labeled antibodies and analyzed by CyTOF. After each staining step, cells were counted using a hemacytometer and the percentage of remaining cells (% of starting number) was calculated. Data are represented as mean $\pm$ SD.

Potential solution

Cisplatin preferentially enters non-viable cells with compromised cell membranes and covalently binds to intracellular proteins. However, it is important to note that Cisplatin also binds to serum proteins in BSA and FBS. If higher than expected cell viability is observed, ensure that Cisplatin staining is performed in PBS and that cells are washed with PBS prior staining. Samples can also be spiked with dead cells prior to staining to confirm that the Cisplatin labelling is working.

Incubating cells with Cisplatin for more than five minutes can result in significant cell death. If lower than expected cell viability is observed, ensure that cells are incubated with Cisplatin for no more than five minutes and then immediately washed with cell staining buffer to quench the Cisplatin. We also recommend dividing the Cisplatin stock solution into single-use aliquots, as using Cisplatin that has been freeze-thawed multiple times can result in increased non-specific binding.

Problem 5

Iodine contamination of samples (step 16).

Potential solution

Significant iodine contamination of samples can damage the ^{127}I detector of the Helios. Ficoll, which is commonly used for PBMC enrichment, is known to contain high levels of iodine. It is therefore important to minimise the amount of Ficoll collected with PBMCs at the interface during PBMC enrichment. Additional washing of the collected cells with PBS may also help to reduce Ficoll contamination.

RESOURCE AVAILABILITY

Lead contact

Further information and requests for resources and reagents should be directed to and will be fulfilled by the lead contact, Diana Hansen (hansen@wehi.edu.au).

Materials availability

This study did not generate new unique reagents.

Data and code availability

This study did not generate any new code.

ACKNOWLEDGMENTS

In memory of our dear friend and colleague, Dr. Andrew Mitchell, who helped us find the invisible. This work was performed in part at the Materials Characterisation and Fabrication Platform (MCPF) at the University of Melbourne and the Victorian Node of the Australian National Fabrication Facility (ANFF). Supported by the Australian Government National Health and Medical Research Council (NHMRC) Independent Research Institutes Infrastructure Support Scheme and Project Grants 1028665 (D.S.H.) and 1137989 (D.S.H.), the Australian Academy of Science (D.S.H.), and the Victorian State Government Operational Infrastructure Support. The graphical abstract was created with [BioRender.com](https://www.biorender.com).

AUTHOR CONTRIBUTIONS

L.J.I., A.J.M., and T.Z. developed the protocols. L.J.I., A.J.M., T.Z., and D.S.H. wrote the manuscript.

DECLARATION OF INTERESTS

The authors declare no competing interests.

REFERENCES

- Finck, R., Simonds, E.F., Jager, A., Krishnaswamy, S., Sachs, K., Fantl, W., Pe'er, D., Nolan, G.P., and Bendall, S.C. (2013). Normalization of mass cytometry data with bead standards. *Cytometry A* 83, 483–494.
- Ioannidis, L.J., Pietrzak, H.M., Ly, A., Utami, R.A., Eriksson, E.M., Studniberg, S.I., Abeysekera, W., Li-Wai-Suen, C.S., Sheerin, D., Healer, J., et al. (2021). High-dimensional mass cytometry identifies T cell and B cell signatures predicting reduced risk of *Plasmodium vivax* malaria. *JCI Insight* 6, e48086.
- Kotecha, N., Krutzik, P.O., and Irish, J.M. (2010). Web-based analysis and publication of flow cytometry experiments. *Curr. Protoc. Cytom. Chapter 10*, Unit10.17.
- Lee, B.H., Kelly, G., Bradford, S., Davila, M., Guo, X.V., Amir, E.-A.D., Thrash, E.M., Solga, M.D., Lannigan, J., Sellers, B., et al. (2019). A modified injector and sample acquisition protocol can improve data quality and reduce inter-instrument variability of the Helios mass cytometer. *Cytometry A* 95, 1019–1030.
- Marsh-Wakefield, F.M., Mitchell, A.J., Norton, S.E., Ashhurst, T.M., Leman, J.K., Roberts, J.M., Harte, J.E., McGuire, H.M., and Kemp, R.A. (2021). Making the most of high-dimensional cytometry data. *Immunol. Cell Biol.* 99, 680–696.
- Rybakowska, P., Alarcón-Riquelme, M.E., and Marañón, C. (2020). Key steps and methods in the experimental design and data analysis of highly multi-parametric flow and mass cytometry. *Comput. Struct. Biotechnol. J.* 18, 874–886.
- Thrash, E.M., Kleinsteinuber, K., Hathaway, E.S., Nazzaro, M., Haas, E., Hodi, F.S., and Severgnini, M. (2020). High-throughput mass cytometry staining for immunophenotyping clinical samples. *STAR Protoc.* 1, 100055.